

I55FI ~ I110FI Android 14 RS232 Command List

Serial port baud rate: 38400 Data bits: 8 Check bit: None Stop bit: 1

Function	Control Code (Hex: 0x)	Return Code (Hex: 0x)	Description
Power On	52 50 08 01 00 00 00 E7	52 50 08 01 01 00 00 E7	Power-on standby/ Remote standby power on
Power Off	52 50 08 01 00 00 01 E7	52 50 08 01 01 00 01 E7	
Sleep	52 50 08 01 00 00 29 E7	52 50 08 01 00 00 29 E7	
Mute	52 50 08 01 00 00 02 E7	52 50 08 01 01 00 02 E7	
Signal Source	52 50 08 01 00 00 03 E7	52 50 08 01 01 00 03 E7	
Display	52 50 08 01 00 00 04 E7	52 50 08 01 01 00 04 E7	
Volume Down	52 50 08 01 00 00 05 E7	52 50 08 01 01 00 05 E7	
Volume Up	52 50 08 01 00 00 06 E7	52 50 08 01 01 00 06 E7	
Channel Down	52 50 08 01 00 00 07 E7	52 50 08 01 01 00 07 E7	
Channel Up	52 50 08 01 00 00 08 E7	52 50 08 01 01 00 08 E7	
Home	52 50 08 01 00 00 09 E7	52 50 08 01 01 00 09 E7	
Menu	52 50 08 01 00 00 0A E7	52 50 08 01 01 00 0A E7	
Return (Exit)	52 50 08 01 00 00 0B E7	52 50 08 01 01 00 0B E7	
Screenshot	52 50 08 01 00 00 0C E7	52 50 08 01 01 00 0C E7	
Page Up	52 50 08 01 00 00 0D E7	52 50 08 01 01 00 0D E7	
Page Down	52 50 08 01 00 00 0E E7	52 50 08 01 01 00 0E E7	
Number1	52 50 08 01 00 00 0F E7	52 50 08 01 01 00 0F E7	
Number2	52 50 08 01 00 00 10 E7	52 50 08 01 01 00 10 E7	
Number3	52 50 08 01 00 00 11 E7	52 50 08 01 01 00 11 E7	
Number4	52 50 08 01 00 00 12 E7	52 50 08 01 01 00 12 E7	
Number5	52 50 08 01 00 00 13 E7	52 50 08 01 01 00 13 E7	
Number6	52 50 08 01 00 00 14 E7	52 50 08 01 01 00 14 E7	
Number7	52 50 08 01 00 00 15 E7	52 50 08 01 01 00 15 E7	
Number8	52 50 08 01 00 00 16 E7	52 50 08 01 01 00 16 E7	
Number9	52 50 08 01 00 00 17 E7	52 50 08 01 01 00 17 E7	
Number0	52 50 08 01 00 00 18 E7	52 50 08 01 01 00 18 E7	
OK	52 50 08 01 00 00 19 E7	52 50 08 01 01 00 19 E7	
←	52 50 08 01 00 00 1A E7	52 50 08 01 01 00 1A E7	
→	52 50 08 01 00 00 1B E7	52 50 08 01 01 00 1B E7	
↑	52 50 08 01 00 00 1C E7	52 50 08 01 01 00 1C E7	
↓	52 50 08 01 00 00 1D E7	52 50 08 01 01 00 1D E7	
Freeze	52 50 08 01 00 00 1E E7	52 50 08 01 01 00 1E E7	
Pause	52 50 08 01 00 00 1F E7	52 50 08 01 01 00 1F E7	
Play	52 50 08 01 00 00 20 E7	52 50 08 01 01 00 20 E7	
Stop	52 50 08 01 00 00 21 E7	52 50 08 01 01 00 21 E7	

Fast Forward	52 50 08 01 00 00 22 E7	52 50 08 01 01 00 22 E7	
Rewind	52 50 08 01 00 00 23 E7	52 50 08 01 01 00 23 E7	
Previous Track	52 50 08 01 00 00 24 E7	52 50 08 01 01 00 24 E7	
Next Track	52 50 08 01 00 00 25 E7	52 50 08 01 01 00 25 E7	
Lock/Unlock	52 50 08 01 00 00 26 E7	52 50 08 01 01 00 26 E7	
Picture Mode	52 50 08 01 00 00 27 E7	52 50 08 01 01 00 27 E7	
Audio Mode	52 50 08 01 00 00 28 E7	52 50 08 01 01 00 28 E7	
Backlight Off	52 50 08 01 00 00 29 E7	52 50 08 01 01 00 29 E7	Backlight Off
One-Key Whiteboard	52 50 08 01 00 00 2A E7	52 50 08 01 01 00 2A E7	
One-Key Annotation	52 50 08 01 00 00 2B E7	52 50 08 01 01 00 2B E7	
One-Key Switch Pen Color	52 50 08 01 00 00 2C E7	52 50 08 01 01 00 2C E7	

Function	Control Code (Hex: 0x)	Return Code (Hex: 0x)	Description
HDMI 1	52 50 08 01 00 01 80 E7	52 50 08 01 01 00 80 E7	Switch to HDMI 1
HDMI 2	52 50 08 01 00 00 81 E7	52 50 08 01 01 00 81 E7	Switch to HDMI 2
HDMI 3	52 50 08 01 00 00 82 E7	52 50 08 01 01 00 82 E7	Switch to HDMI in front
OPS (HDMI 4)	52 50 08 01 00 00 83 E7	52 50 08 01 01 00 83 E7	Switch to OPS
TV	52 50 08 01 00 00 84 E7	52 50 08 01 01 00 84 E7	Switch to HDMI 1
VGA	52 50 08 01 00 00 85 E7	52 50 08 01 01 00 85 E7	
YPBPR(Component)	52 50 08 01 00 00 86 E7	52 50 08 01 01 00 86 E7	
AV(Video)	52 50 08 01 00 00 87 E7	52 50 08 01 01 00 87 E7	
DP	52 50 08 01 00 00 88 E7	52 50 08 01 01 00 88 E7	
TYPE-C	52 50 08 01 00 00 89 E7	52 50 08 01 01 00 89 E7	
Backlight On	52 50 08 01 00 00 90 E7	52 50 08 01 01 00 90 E7	Backlight On (Off)
Disable Touch	52 50 08 01 00 01 00 E7	52 50 08 01 01 01 00 E7	Restart Enables Touch
Enable Touch	52 50 08 01 00 01 01 E7	52 50 08 01 01 01 01 E7	
Disable/Enable Touch	52 50 08 01 00 01 02 E7	52 50 08 01 01 01 02 E7	Toggle Switch
Disable Keypad	52 50 08 01 00 01 03 E7	52 50 08 01 01 01 03 E7	System Restart does not automatically enable Keypad
Enable Keypad	52 50 08 01 00 01 04 E7	52 50 08 01 01 01 04 E7	
Disable/Enable Keypad	52 50 08 01 00 01 05 E7	52 50 08 01 01 00/01 05 E7	Toggle Switch
Disable IR Remote	52 50 08 01 00 01 06 E7	52 50 08 01 01 01 06 E7	System Restart does not automatically enable IR remote
Enable IR Remote	52 50 08 01 00 01 07 E7	52 50 08 01 01 01 07 E7	
Disable/Enable IR Remote	52 50 08 01 00 01 08 E7	52 50 08 01 01 00/01 08 E7	Toggle Switch
Immediate Power Off	52 50 08 01 00 01 09 E7	52 50 08 01 01 01 09 E7	Immediate Shutdown (Bypass Smart Power)

Function	Control Code (Hex: 0x)	Return Code (Hex: 0x)	Description
Touch Pen (Left) Up	52 50 08 01 00 02 01 E7	52 50 08 01 01 02 01 E7	
Touch Pen (Left) Down	52 50 08 01 00 02 02 E7	52 50 08 01 01 02 02 E7	
Touch Pen (Right) Up	52 50 08 01 00 02 03 E7	52 50 08 01 01 02 03 E7	
Touch Pen (Right) Down	52 50 08 01 00 02 04 E7	52 50 08 01 01 02 04 E7	

Function	Control Code (Hex: 0x)	Return Code (Hex: 0x)	Description
Zoom In Camera	52 50 08 01 00 02 05 E7	52 50 08 01 01 02 05 E7	Zoom In
Zoom Out Camera	52 50 08 01 00 02 06 E7	52 50 08 01 01 02 06 E7	Zoom Out